ZKBio CVSecurity Integrated Arteco User Manual

CONTENT

I. Ins	stall Arteco	1
3.Cli	ick [Next] and [Install].	2
II. Co	onfigure Arteco Server	3
	- 1.Login Arteco Server	3
	2.Add a new user.	4
	3.Enter "Setup" menu. Add peripherals.	4
III.	Setting ZKBio CVSecurity	9
IV.	Test Function	13

I. Install Arteco

1. Select "Full Installation" and click [Next].



2.Keep default options. Click [Next].

Where the ap	plication should sa	ve the data?		
Storage Path				
E: ARTECO-S	STORAGE			Browse
Configuration	Path			
E:\Program F	iles (x86)	202		Browse
Main Port	7000			
HTTP Port	80	SSL Port	443	
Use Licens	e Server			
Indirizzo IP		TCP Port		
		Reset		

3.Click [Next] and [Install].

e lect Whic	t Additional Tasks ich additional tasks should be performed?	arte
Sele ART	ect the additional tasks you would like Setup to perform while installing TECO-SERVER, then dick Next.	
Add	ditional shortcuts:	^
\square	Create an entry in the Start Menu	
\square	Create a <u>d</u> esktop shortcut	
Othe	er tasks:	
\square	Use English measurement units instead SI units	
Star	rtup settings:	
0	Do not start at windows startup	
0	Start at Windows startup	
۲	Install ad run as Windows Service	~
etup eady Seti	ARTECO-SERVER version 10.0.1.2209 — y to Install up is now ready to begin installing ARTECO-SERVER on your compute	Cancel
etup eady Seti	ARTECO-SERVER version 10.0.1.2209 or Install up is now ready to begin installing ARTECO-SERVER on your compute k Install to continue with the installation, or click Back if you want to r	Cancel
etup eady Setu Clich chai	e Back <u>Next ></u> e - ARTECO-SERVER version 10.0.1.2209 — y to Install up is now ready to begin installing ARTECO-SERVER on your compute k Install to continue with the installation, or click Back if you want to r nge any settings.	Cancel
etup eady Setu Clid chai	e ARTECO-SERVER version 10.0.1.2209 o ARTECO-SERVER version 10.0.1.2209 o Install up is now ready to begin installing ARTECO-SERVER on your compute k Install to continue with the installation, or click Back if you want to r nage any settings. estination location: E:\Program Files (x86)\ARTECO-SERVER	Cancel
etup Sett Clid chai De Se	e ARTECO-SERVER version 10.0.1.2209 o ARTECO-SERVER version 10.0.1.2209 o Install up is now ready to begin installing ARTECO-SERVER on your compute k Install to continue with the installation, or click Back if you want to r inge any settings. estination location: E:\Program Files (x86)\ARTECO-SERVER estination location: E:\Program Files (x86)\ARTECO-SERVER estination location: E:\Program Files (x86)\ARTECO-SERVER estination location: Full Installation ARTECO-SERVER estination estination full Installation ARTECO-SERVER estination estination estination full Installation estination	Cancel
etup Sett Clid De Se Se	Eack <u>Next ></u> ARTECO-SERVER version 10.0.1.2209 — y to Install up is now ready to begin installing ARTECO-SERVER on your compute k Install to continue with the installation, or click Back if you want to r inge any settings. estination location: E:\Program Files (x86)\ARTECO-SERVER etup type: Full Installation elected components: Main components and common files Microsoft Visual C++ Redistributable Package Database service Database service Visual C++ Redistributable Package Database service Visual C++ Redistributable Package Database service Visual C++ Redistributable Visual C++ Redistributab	r. a
etup Setu Clid chai Se Se		r. a
etup Seta Clid chai Se Se	< Back Next > • • ARTECO-SERVER version 10.0.1.2209	cancel

4. Activate Arteco Server. Put activation files in the installation path.

ن المعالم المعالم المعالم المعالم المحالي محالي	磁盘 (D:) ▶ Program Files ▶ artecoserve	er 🕨	• •	搜索 artecoserver		<mark>ـ x</mark>
文件(F) 编辑(E) 查看(V) 工具	.(T) 帮助(H)					
组织▼ 包含到库中▼ 共	[享▼ 新建文件夹					0
▲ ● 佐藤本	名称	修改日期	类型	大小		*
	🔮 lang.xml	2019/6/27 15:54	XML 文档	8 KB		
	 Languages.lang	2020/2/18 16:56	LANG 文件	8 KB		
	🚡 Launch ARTECO-NEXT Portable	2019/7/29 7:36	快捷方式	2 KB		
121 第近访问的12百	LicenseSidGenerator.exe	2020/2/18 16:44	应用程序	2,165 KB		
	📄 local.arl	2020/5/27 8:49	ARL文件	2 KB		
▲ 1 壘 计算机	📄 local.rgc	2020/5/27 8:49	RGC 文件	1 KB		
⊳ 🏭 Win 7 Ult ×64 (C;)	local.sid	2020/5/27 8:46	SID 文件	2 KB		
▷ 👝 本地磁盘 (D:)	📄 locpref.xml	2019/5/13 16:46	XML文档	1 KB		
🖂 本地磁盘 (E:)	🗟 logger.dll	2018/9/24 8:05	应用程序扩展	28 KB		-
▷ 💼 本地磁盘 (F:)	📄 MobileConfig.×ml	2020/5/27 8:54	XML文档	1 KB		1
» 👽 PC201903280615 上的 F	🔲 nircmd.exe	2019/5/13 16:46	应用程序	113 KB		E
	100 A.P. 14	0010 (0 (0 1 0 0F	2-030 et	00 KD		

5.Open "Arteco-Console". Click [Restart Server], all service states are running for activation success.

	Service	Status	Startup Type
1	ARTECO-GUARDIAN	Running	Automatic
/	ARTECO-SERVER	Running	Automatic
1	Arteco HTTP Server	Running	Automatic
1	ARTECO-MOBILE Service	Running	Automatic
0.0		Duranian	Automatic

II. Configure Arteco Server

1.Login Arteco Server.

(1).First open "Arteco Next", prompt "Create a Connection". If it's a local server, "Host Name" filled in 127.0.0.1. Click [Proceed].

Create a Co	nnection	
Static/Internal IP	Address or Host Name	TCP Port
127.0.0.1		7000
1		Test Connection
	2 Proceed Cano	el

(2).Next, prompt "Authorization Required", enter the default administrator password 1234. Click [Confirm].



2.Add a new user.

Login successed, you can choose to change the administrator password and add a new user for connector.

LIVE SEARCH E3 B B B Dome Ptz Sequence Image: Control of the second sec	X	- C			indow - [Configurations]	M49LQT - Main \	NIA - DESKTOP-K	ON
						SEARCH	LIVE	
				Dome Ptz Sequence	🗩 Dome Ptz Preset 🗾 🗸 (-		$\underline{A} < \vee$	90
C controls USERS					Configurations		Device List 🛛 🕈 🗙	0
Image: Server Name Auditing Image: Server Name Image: Server Name Image: Server Name Auditing Image: Server Name Image: Server Name	^						> 🛅 All Dev	Ŭ
USERS First Name Lat Kame Username Rights Refer to the commentation of the commentatio					Credentials	PTZ		ŧīŧ
Image: Control of the second of the secon		Rights	Username	Last Name	First Name	USERS		
Domai Roles I Audding Velopin and Logout Velopin						Local L		
Roles I Auditing Available cameras Auditing CSEXTOP ADMES Q7 Available cameras Auditing Validable cameras Recordings Supervisor Auditing Validable cameras Add/Edit/Remove Users Auditing Validable cameras Add/Edit/Remove Users Validable cameras Validable cameras Validable cameras Validable cameras Validable cameras Validable cameras Validable cameras Validable cameras Validable cameras			Confirm Password	Password	Old Password	Domai		(\cdot)
Auditing Available camenas Auditing 						Roles F		
Auditalie cameras Auditalie cameras Auditalie Audita						Auditii		
Audiong V login and logious V login and login V lo			Perordings Supervisor	Available cameras	Server Name			
Auditing Login and Loginut. AddEdit/Remove Lisers AddEdit/Remove Lisers Device Prim. # X V Play Recording: V Play Events V Play Recording: V Play Events								
Audating Image: Image	-				turitin-			
Image: Play Recordings Image: Play Recordings<	s	Add/Remove Devices	lit/Remove Users	✓ Add	✓ Login and Logout			
Device Pro_ 4 × // Device Verson // Enabled/Distributed Camera // Enabled/Distributed Camera		Delete Recordings	iente:	Z Plan	Play Percerdings		< " >	
	aulo 🗉	Enabled/Disabled Pla	d/Dicabled Camera	- Frai	C Delete Events		Device Pro 🕈 🗙	
	5911	Choice bisolice his						
Ke Enableo luisabileo Hugin Scheoluer Ke Licensing			ng	✓ Lite	Enabled/Disabled Plugin schediuer			
New User Add Save Delete			Save Delete					
	\sim							ŝ
	>				K			253

3.Enter "Setup" menu. Add peripherals.

3.1 Choose [Peripherals] -> [Add New] -> [Connector].

(1).Open [Basic Setting] page. Set the "Description" as "Realtime Monitor". Click

[Apply].When you add this connector on ZKBio CVSecurity, you need input this "Element ID".

ON ON	INIA - DESKTOP-KM49LQT - Main Wind	low - [Configurations]							- 0) ×
					\$° 8		100% 🔹 🕜 🔗			
оС		Dome Ptz Preset	🗾 🥌 Dome Ptz	Sequence	*					
6	Device List 9 ×	88 88 88	🕲 Configuratio	ins						4 Þ
	🗸 🗋 All Devices 🔷	Realtime Monitor						Revert	Appl	
붜	V 🔚 DESKTOP-KM49LQT	CONNECTOR								
88	Video Channels	Basic Settings					CONNECTOR			
<u>(</u>)	V 📢 Peripherals	External Events Cameras					Element ID:			
	✓ open/close =						Description:			
	door-1 aler	Web Device					Realtime Monitor			
	door-1 rela	Custom Comn								
	door-1 sen	LAYOUT VIEW					Port			
	KBioSecu	EVENT NOTIFICA					Https Port			
	Realtime IV						Autodelete Events -			
	Device Bropertier						Retention Days			
	Device info:									
	Server: DESKTOP-KM49LQ1									
	Name: Realtime Monitor									
63										
Add Sh	ape								CAP NUM	SCRL

(2).Open [External Events] page. Select "Enable External Events", "Enable Data Acquisition" and "Enable Image Acquisition". Click [Apply]. Then you will see user photo, logs and so on under real-time monitoring interface.



(3).Open [Cameras setting] page. You can add a shortcut icon which can be used to review video and enter video monitoring.



(4).Open [I/O] page. Select "Enable I/O Handing". Set "Associated I/O" as 4, which is used to

remote opening door under "Realtime Monitor". Click [Apply].



(5).Open [Web Device] page. Which is used to remote opening door under "realtime monitoring". Click [Apply].



3.2 Choose [Peripherals] -> [Add New] -> [I/O CONTROLLER] -> [ARTECO] -> [EXTERNAL I/O].

Add 4 "EXTERNAL I/O": open/ closedoor-1, door-1 sensor, door-1 alerm and door-1 relay. When you add a door on ZKBioCVSecurity and you want to show it on Arteco, then you need to input the ID of corresponding "EXTERNAL I/O".

(1).Add open/close door.

OM	INIA - DESKTOP-KM49LQT - Main Win	dow - [Configurations]						- O ×
	LIVE SEARCH) 100% 🔸 🗹 😫	
Jo		Dome Ptz Preset	Dom	e Ptz Sequence	•			
6	Device List 🛛 🕂 🗙	88 88 88	🖁 🙆 Configu	irations				4 Þ
111	V 🗋 All Devices	open/close door -1					Revert	Apply
	DESKTOP-KM49LQT DESKTOP-KM49LQT Video Channels	PERIPHERAL Basic settings	EXTERNAL I/O open/close door -1					
()	✓ < Peripherals ✓ open/close [≦]	Custom Commar EVENT NOTIFICATI		3				
	✓ door-1 rela ✓ door-1 rela ✓ door-1 sen		Send out the htt	p state related to the rea	ceived http state			
	ZKBioSecu		Enable Event					
	Realtime N		Reset After (sec)	Never				
			Trigger	Undefined				
			Input					
	Device info:		Address	127.0.0.1				
	Server: DESKTOP-KM49LQ1		Port (Http)			Port (Https)		
	Name: open/close door -1		CGI high state	/arteco-mobile/writ	te.fcgi?pin=3&status=1			
{	D: 3 🗡							\sim

Output:

Address: The IP address of ZKBio CVSecurity server. Port: The port of ZKBio CVSecurity. CGI hig state:/tokenivideo/arteco/openControlEntity?pin[]&interval=5 CGI low state: /tokenivideo/arteco/closeControlEntity?pin=[]

Notes:

- Set CGI high/low state URL Output make sure the pin as same as the pin of Input.
- You can change the "interval" value ranges from 1 to 255. That means, when you set it to 5, the door will open for 5s. If you set it to 255, the door will be kept open always.
- Please input following linkage in the blank behind "CGI low state", then you can remote close the door.



(2).Add door-1 sensor.



(3).Add door-1 alerm.

ON ON	INIA - DESKTOP-KM49LQ	- Main Window - [Con	figurati	ons]					- 🗆 🗙
	LIVE SEAF								
0) 💬 💬 Dom			Dome Ptz Sequence				
୍ତ	Device List		‡×		🗄 🙆 Confi	gurations			
	All Devices		\sim	door-1 alerm					
łił	V 🔚 DESKTOP+)	M49LQT		PERIPHERAL	EXTERNAL NO.				~
88	□ ¶ Video	Channels		Basic settings	door-1 alerm				
0	v 🔩 Peript	erals		Schedule					
\odot	4	pen/close door -1		Custom Comn					
	4	oor-1 alerm		EVENT NOTHICA					
	4	oor-1 relay							
	4	oor-1 sensor			Send out the http	p state related to the rece	lived http state		
	4	KBioSecurity-MTD			Z Enable Event				
	4	ealtime Monitor			Reset After (sec)				
	> 🕥 Maps		\sim		Trigger				
			₹×						
	Device info:		\sim		mpor				
					Address				
	Server: DESKTOP	-KM49LQT [127.0.0.1:700			Port (Http)			Port (Https)	
					CGI high state	/arteco-mobile/write	fogi?pin=5&status=1		
¢			\sim						\sim

(4).Add door-1 relay.

D OM	1NIA - DESKTOP-KM49LQT - Main Window - [Con	figurat	ions]				- O ×
	LIVE SEARCH				■ ☎ 8 ≒ ∖ ໖ 등 음 ⊕ ໑ ▾ ♂ 8		
)0		e Ptz P	reset 🗾 🗧	Dome Ptz Sequence			
0	Device List	ά×		🔠 🙆 Confi	igurations		4 Þ
<u> </u>	All Devices	^	door-1 relay			Revert	Apply
łţł	DESKTOP-KM49LQT		PERIPHERAL	EVTERNAL UO			~
88	Video Channels		Basic settings	door-1 relay			
$\overline{\mathbf{O}}$	~ < Peripherals		Schedule				
\odot	open/close door -1		Custom Comn				
	door-1 alerm		EVENT NOTIFICA				=
	door-1 relay						
	door-1 sensor			Send out the http	p state related to the received http state		
	ZKBioSecurity-MTD			Enable Event			
	Realtime Monitor			Reset After (sec)			
	> 🔘 Maps	\sim		Trigger	Undefined ~		
	Device Properties	ά×		_ logut			
	Device info:	^		mput			
				Address			
	Server: DESKTOP-KM49LQT [127.0.0.1:70(Port (Http)	Port (Https)		
	Name: door-1 relay			CGI high state	/arteco-mobile/write.fcgi?pin=6&status=1		
\$		\sim					\sim
Add Shi	ape						GAP NUM SCRL

3.3 Choose [Peripherals] -> [Add New] -> [WEB-DEVICE].

Open Basic settings, set "WEB-DEVICE" as "ZKBio CVSecurity", input "IP Address" and "Port" of ZKBio CVSecurity. Click [Apply]. You can use this WEB-DEVICE as a shortcut linkage of ZKBio CVSecurity on Arteco system.

ОМ	NIA - DESKTOP-KM49LQT - Main Window - [Co	nfigurations]		- O ×
	LIVE SEARCH		▋┓ぐ□■■∥∥₿≒、 ©₴₴₯०∞∞ • ⊄₿%	
90	\underline{A} < \vee \wedge > \oplus \ominus Don	ne Ptz Preset 🗾 👻	Dome Ptz Sequence	
୍	Device List 🕴 🕈 🗙		Ground @ Configurations	4 Þ
	All Devices	ZKBioCVSecurity-MTD	Revert	Apply
łił	V E DESKTOP-KM49LQT	PERIPHERAL		
믭	Video Channels	Basic settings	ZKBioCVSecurity	
\odot	V Peripherals	EVENT NOTIFICATION		
\odot	open/close door -1			
	door-1 alerm			
	door-1 relay		IP Address: 10.8.14.39	
	door-1 sensor		Port: 80	
	ZKBioCVSecurity			
	Realtime Monitor		Username:	
	> 📀 Maps		Password:	
	> E Layouts			
ŝ				
కరికి				

III. Setting ZKBio CVSecurity

Choose [System] -> [Third Party Integration] -> [Connector]. You need to applicate "ARTCECO" license to activate this part.



(1).Click [Parameters]. The Parameters page is displayed.

/ideo Server Settings		
Server Type	Arteco	
Server IP	10.8.14.51	
Server Port	80	1
Username	TEST	1
Password	••••	1
BioSecurity Domain	http://10.8.14.39:8098	0
Sends Event Interval	500	ms

OK Cancel

The fields are described as follows:

Server IP: Arteco Server IP.

Server Port: Arteco Server Port.

Username: Arteco User Username.

Password: Arteco Server User Password.

BioSecurity Domain: ZKBio CVSecurity Server IP Address.

(2).Click [New]. The NEW page is displayed.

Name*	Realtime Monitor
ID*	1
WebDevice ID	4

The fields are described as follows:

Name: Arteco CONNECTOR Name.

ID: Arteco CONNECTOR Element ID.

WebDevice ID: Arteco WEB-DEVICE ID.

(3).Add doors to Connector. Click [Edit] to set the ID and shortcut icon of the door, and the ID should be same with the ID of the corresponding EXTERNAL I/O on Arteco.The icon must correspond to the icon on the ARTECO.

TZKBio CVSecurity	ж			\rm e admin 👻
System / Third Party Integration	/ Connector			
Connector	<.	Realtime Monitor (1)		,
Name		Name Relay	More≁ Q ⊘	
🛆 🔾 Refresh 🖅 New 💼 De	elete ₩† Parameters	⊖ Refresh		
Name ID	Element Operations	Device Na Name Type	Open/Cl Re Sen Alarm Operations	
*) Tows per page + Jump To 1 /1 Page	j< < 1-1 → >j 50 rows per page ≁ Ju	ump To 1 /1 Page Total of 1 records	
	Edit	×		
Open/Close Door ID	3			
Open/Close Door Icon				
Relay ID	6			
Relay Icon				
Door Sensor ID	7			
Door Sensor Icon				
Alarm ID	5			
Alarm Icon				
	OK Canc	el		

(4).Click [Video Channel]. Add two cameras.

ŪΖ	KBio CVSecurity III #	e admin ~
<u>6</u>	System / Third Party Integration / Video Channel	
1	Name ID Q	
<u>®</u>	O Refresh I Delete	
٨	Name ID Icon Operations	
	<u>carmea2</u> 2 🛃 🖉 🖻	
	🗌 <u>carmea1</u> 1 🛃 🖉 🖻	
	> I< < 1-2 > >I 50 rows per page * Jump To 1 /1 Page Total of 2 records	

(5).Click [Bind/Unbing Camera]. Add camera to door.

ne Monitor (1) ne Reiay More Q Q Refresh @ Delete Device Name Name Type Open/Clo Rel Sensor Alarm Operations 10.8.14.69 10.8.14.69-1 Door 3 6 7 5 Q () () () () () () () () () (
Refresh @ Delete Device Name Name Type Open/Clo Rel Sensor Alarm Operations 10.8.14.69 10.8.14.69-1 Door 3 6 7 5 2 3 (1-1 > >) 50 rows per page + Jump To 1 /1 Page Total of 1 records /Unbind Carmera
Refresh Image: Delete Device Name Type Open/Clo Ref Sensor Alarm Operations 10.8.14.69
Refresh 🖹 Delete Device Name Name Type Open/Clo Rel Sensor Alarm Operations 10.8.14.69 10.8.14.69-1 Door 3 6 7 5 4 () () () () () () () () () ()
Device Name Name Type Open/Clo Rel Sensor Alarm Operations 10.8.14.69 10.8.14.69-1 Door 3 6 7 5 2 Image: Sensor Image: Sensor
10.8.14.69 10.8.14.69-1 Door 3 6 7 5 2 3 <
< 1-1 > >1 50 rows per page + Jump To 1 /1 Page Total of 1 records
< 1-1 >>1 50 rows per page + Jump To 1 /1 Page Total of 1 records
/Unbind Camera
Selected(2)
Selected(2)
D I Name I ID
carmea2 2
>> carmea1 1
>
<
<<

(6). Finally, Reboot ZKBio CVSecurity Service.

用程序 进程 服务	性能 联网 用户				
名称		PID	描述	状态	工作
AudioSrv		788	Windows Audio	正在运行	Local
AxInstSV			ActiveX Installer (AxInstSV)	已停止	AxIns
BDESVC			BitLocker Drive Encryption Service	已停止	netst
BFE		1216	Base Filtering Engine	正在运行	Local
BioPlatform Cache Service	í.	1032508	32508 BioPlatform Cache Service 35500 BioPlatform Camera Service	正在运行 正在运行	暂缺
BioPlatform Camera Servio	:e	1785500			暂缺
BioPlatform Core Service		2444336	BioPlatform Core Service	正在运行	暂缺
BioPlatform Database Serv	rice	670016	BioPlatform Database Service	正在运行	暂缺
BioPlatform Dependent Bus	iness Service	2345208	BioPlatform Dependent Business Service	正在运行	暂缺
BioPlatform DetectFace Se	etectFace Service 23349		BioPlatform DetectFace Service	正在运行	暂缺
BioPlatform Finger Servio	:e	1261356	BioPlatform Finger Service	正在运行	暂缺
BioPlatform ISSOnline Ser	vice	2376472	BioPlatform ISSOnline Service	正在运行 正在运行 正在运行 已停止 正在运行 正在运行 已停止	暂缺
BioPlatform Online Protec	t Service	107060	BioPlatform Online Protect Service		暂缺
BioPlatform Video Service	6	140136	BioPlatform Video Service		暂缺
BioSecurity Ocr Service			BioSecurity Ocr Service		暂缺
BITS		876	Background Intelligent Transfer Service		nets
Browser		876	Computer Browser		netst
bthserv			Bluetooth Support Service		bthsv
CertPropSvc		876	Certificate Propagation	正在运行	nets
clr_optimization_v2.0.507	27_32		Microsoft .NET Framework NGEN v2.0.5072	已停止	暂缺

IV. Test Function

1. Receive Access Realtime Event records, it includes of Temperature and Mask info.



2.Remotely open/close door. Click [open/close door] button.

OMNAL-DESKTOP-MM49LQT-Main Window-Layout 1 BB															
IVE SEARCH Image:		D OM	NIA - DESKTOP-KM49	LQT - Main Wind	dow - [La	ayout 1]								- 0	
R Image: Constraint of the second of the			LIVE SE	ARCH	۲	_88 _8	8.88.88.88								
A Description Image: All Description B Image: All Description Image: All Description Image: All Description Image: All Description Image: All Description Image: All Description Image: All Description Image: All Description <		0	Device List	۷.	4 U 4 X	₽ + 00, m/	X 00 abc	00 Lawout 2							đÞ
R O LABORS C DESCROP LAMARLOT H O SCHOOL PARAMELOR V C Penpherals C Descret Properties C Descret Properti		č			~			EE Layour S					1		
R Image: Sector Public Channels Image: Sector Public Channels Image: Sector Public Channels		0													
Image: Control of the control of th	Re			P-KM49LQT											
Image: Control of the production of		壯	□¶ Vie	deo Channels							10.8.14.69-1's Relay 10.8.14.69-1's Sentor	10.R. 14.69-1's Alarm Open/Close			
Image: Control of the control of th		<u>00</u>	- 🔩 Pe	ripherals											
Image: Second	1		X	open/close do	or -1										
AF proved possible of the second possible of		(\mathbf{i})	×	door-1 alerm	=						∂				
AF Exercise properties and the second of the			~	door-1 relay											
AF proved properties provide of UT2000 bit 00 0000 and the start of t				door-1 renror					Names cal artmost N d Number	thy Carl Harrer ame: Department Name	ZKBioSecurity Event				
AF Energy DESCOD 04400 0 102000 DESCOD-04449QT Realtime Monitor Remote Closing 10.8.14.69-1 (07/09/22 17:35:30) 0535:30 PM 07 Sep 2022	o				1.075				108.1	Normal Verily Open 0.8.34.69-1 4.69					
Image: Section of the string Monitor Image: Section of the section of t			~	ZKBioSecurity-	MTD				Area Namel	10.8.14.69-1-Out Only Regerprint					
AF Exercise Desice Properties ® × Live Event AF Exercise DESCTOP-MM49LQT Realtime Monitor Normal Verify Open, cathy, 10.8.14.69-1 (07/09/22 1735:36) 05.353.69 Mt 07 Sep 2022			< 	Realtime Monit	tor				None	0 °C					
Ref Desice Desice Desice Prom Server Name Desice Desice Event Time ▲ Pro… ▲ Use AF Fearer DESECTOP (MM0 of 10.2 or 0) DESECTOP-MM49Q.CT Reatime Monitor Normal Verify Open, cathy, 10.8.14.69-1 (07/09/22 17:35:30) 053536 PM 07 Sep 2022			> 🔘 Ma	aps											
Device Properties # x Device info Event Time ▲ Pro▲ Use Device Info: Box▲ Becket Monitor Normal Verify Open, cathy, 10.8.14.69-1 (07/09/22 17:35:36) 05:3536 PM 07 Sep 2022 Verify Open, cathy, 10.8.14.69-1 (07/09/22 17:35:36) 05:3536 PM 07 Sep 2022 AF Events DESCTOP-MAMPLQT Reatime Monitor Remote Closing, 10.8.14.69-1 (07/09/22 17:35:31) 05:3536 PM 07 Sep 2022			. 8 2 - 1-	voutr	\sim	Live Ever									Φx
Device info: DEscription					4 ×	Boo +	Server Name	Device 🔺		Description 🔻		Event Time		Pro 🔺	Userna
AF Evenue DEExtCOP. MM/9 OF UT2 0.0 DESXTOP-MM49LQT Realime Monitor Remote Closing.10.8.14.69-1 (07/09/22 1736831) 053831 PM 07 Sep 2022			Device info:				DESKTOP-KM49LQT	Realtime Moni	itor	Normal Verify Open, cathy ,	10.8.14.69-1 (07/09/22 17:35:36)	05:35:36 PM 07 Sep 2022			
AF Server DESKTOR KMM0 OT 1127.0.0							DESKTOP-KM49LQT	Realtime Moni	itor	Remote Closing, 10.8.14.69-	1 (07/09/22 17:36:31)	05:36:31 PM 07 Sep 2022			
Server: DESKTOP-KM49LQT [127:00] DESKTOP-KM49LQT Realtime Monitor Remote Opening.10.8.14.69-1 (07/09/22 17:36:26) 05:36:26 PM 07 Sep 2022	AF		Server: DESKI	TOP-KM49LQT [12	7.0.0.		DESKTOP-KM49LQT	Realtime Moni	itor	Remote Opening, 10.8.14.69	9-1 (07/09/22 17:36:26)	05:36:26 PM 07 Sep 2022			
Name: open/close door -1			Name: open/	/close door -1		5									
		522			\sim										
		203	K		\geq	<									>

3.Click [ZKBioSecurity] button. Insert ZKBioSecurity Page.



4.Click [door-1 relay]. Open door-1 relay.

	D OM	INIA - DESKTOP-	KM49LQT - Main	window - [La	yout 1]									— C	
		LIVE	SEARCH		_=== _==	₽ <u>₽</u> [≈] ≈ ₽ _× ₽									
	0	Device List		4 ×		ut 1 🔠 Layout 2	EE Layout								4 Þ
	C	🗸 🛅 All De	vices	^											
Re	\odot	~ 80	ESKTOP-KM49LQ												
	붜		Video Channe	els											
	00	~ •	4 Peripherals							2018.14.09-15 Ralay 10.	8.14.69-1's Sensor 10.8.1	4.69 1's Alarm OpenyClose			
1	00		open/clo	ose door -1											
	(\mathbf{i})		door-1 a	lerm 🗏						\mathcal{O}					
			door-1 re	elay					07/00/22 37:38:23	ZKBisSecurity Event					
			door-1 s	ensor					Hame: In In Intion: Remote Closing						
01			ZKBioSee	curity-MTD				Device 10.9 Area Area N	10.9.14.69-1 1.14.69 Iama						
			Realtime	Monitor				Read or Nam Verification Temperature	Red Other Hodal Other 1:0 %						
		, (Maps												
4			P. 1	\sim											
		Device Properties		4 ×											ά×
				^											Userna
		Device info:				DESKTOP-KM49LQT	Realtime N	Ionitor	Normal Verify Open, cat	hy ,10.8.14.69-1 (07/09/2	2 17:35:36)	05:35:36 PM 07 Sep 2022			
						DESKTOP-KM49LQT	Realtime N	Ionitor	Remote Closing, 10.8.14	.69-1 (07/09/22 17:36:31)		05:36:31 PM 07 Sep 2022			
~		Server:	DESKTOP-KM49L	QT [127.0.0.		DESKTOP-KM49LQT	Realtime N	Ionitor	Remote Opening, 10.8.1	4.69-1 (07/09/22 17:36:26		05:36:26 PM 07 Sep 2022			
-		Name:	open/close door			DESKTOP-KM49LQT	door-1 rela	y	External Input			05:38:15 PM 07 Sep 2022			
	5.23			\sim											
	503	<		>	<										>
THE	Add Sha	ape											LOG PAUSE	CAP NUM	SCRL

5.Click [door-1 alerm], close door-1 alerm.

	-								
	U OM	NIA - DESKTOP-KM49LQ1 - Main Window - [La	ayout 1]						
			2 ²⁸ + ²⁸ × ²⁸ abc						
	0	Device List 9 ×	Hayout 1 Hayout 2 Hayout 2	yout 3					4 Þ
		v 🛅 All Devices							
Re	\odot	V 🔚 DESKTOP-KM49LQT							
	붜	Video Channels							
		V 📢 Peripherals			20.8.14.69-15	s Relay 10.8.14.69-1's Sensor 10.8.14	.69-1's Alarm Open/Close		
(88	open/close door -1							
	(i)	doors1 alerm							
					03/08/22.17.38:35				
I		door-1 relay			ast Name: ZKEnGecurity	y Event			
0		door-1 sensor		Event Descrip Event Point:	10.8. Hemote Closing 10.8.14.09-1				
		ZKBioSecurity-MTD		Area Area Na Reader Name	14.09 mma Other				
ľ		Realtime Monitor		Temperature Nackt None	o'c				
1		> 🕐 Maps							
		, 🕮 Lavoute 🛛 🗹							
		Device Properties 7 ×	Live Event		Description		Front Time 1	D	4 ×
		Device info:	DESKTOD KM40LOT Park	ice 🔺	Neural Varies Open enthy 10.9 14 60 1	(07/00/22 17/25/26)	05-25-26 DM 07 Car 2022	P10	Usema
			DESKTOP-KM49LQT Realt	me Monitor	Remote Cloring 10.8.14.69-1 (07/09/22.1	(07/09/22 17:55:50)	05:35:36 PM 07 Sep 2022		
AF		Server: DESKTOP-KM49LQT [127.0.0.	DESKTOP-KM49LQT Realty	me Monitor	Remote Opening 10.8 14 69-1 (07/09/22	17:36:26)	05:36:31 PM 07 Sep 2022		
		Name: open/close door -1	DESKTOP-KM49LOT door-	1 relay	External Input	11.30.20	05:38:15 PM 07 Sep 2022		
	- 0-	ID: 3	DESKTOP-KM49LOT door-	1 alerm	External Input		05:38:48 PM 07 Sep 2022		
	5	< " >	<						
HE	Add Sha	spe						LOG PAUSE CAP NUM	SCRL

6.Click [door-1 sensor]. Open door-1 sensor.

